


Before using the dishwasher, read the user instructions!

GSFS 4581

# Quick Reference Guide



On/Off button

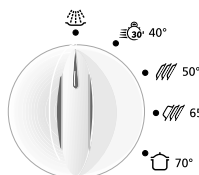

Programme selector knob



Start

## Start button

Switches "on" when the dishwasher is operating. Flashes when a fault occurs. Switches off at the end of the programme.

Programme chart				Detergent <sup>2)</sup>		Consumption <sup>3)</sup>		
Programmes		Loading instructions		A	B	Litres	kWh	Minutes
Pre-Rinse	cold	Crockery to be washed later.		-	-	5.0	0.02	10
Rapid 30 min	40°C	Lightly soiled crockery with no dried-on food.		X	-	13.0	0.70	30
Standard <sup>1)</sup>	50°C	Normally soiled crockery.		X	X	16.0	1.05	120
Normal	65°C	Normally or heavily soiled crockery.		X	X	16.0	1.65	100
Intensive	70°C	Heavily soiled crockery, especially pots and pans.		X	X	17.0	1.90	135

1) Reference programme for energy label in compliance with EN 50242 regulations;

2) Refer to "User instructions";

3) Program data obtained in conformity with European standard EN 50242. Values may vary in relation to usage, e.g.: different loads, water temperatures - above or below 15°C - as well as water hardness and power supply voltage, etc.

Important information for Test Laboratories:

For detailed information on the EN comparison test and other tests, contact the following address: "nk\_customer@whirlpool.com".

Bauknecht is a registered trademark

**5019 496 98005**

(We reserve the right to make technical modifications)

## How to use the appliance

Further indications are given in the single chapters and in the user instructions.

### Switch on the appliance

Press the **ON / OFF** button.


### How to fill the detergent dispenser

Large compartment **A**:

With each wash cycle.

Small compartment **B**:

For programmes with pre-wash only.

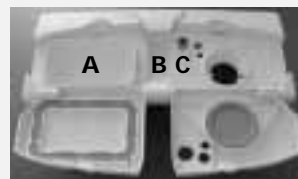

### Check the rinse aid level

Mechanical indicator **C**.

Electric indicator on control panel (if provided).

### Check the regeneration salt level

**On models with water softener system only.**

Mechanical indicator **D**.

Electric indicator on control panel (if provided).



### Load the racks

Refer to the dishwasher loading instructions.

### Close the door, turn on the water tap

### Select a programme

The last programme selected will light up.

Select the desired programme (using the specific button or knob). The corresponding indicator lamp lights up.

### Select additional options

If necessary (and if provided) the corresponding indicator lamp lights up.

### Press the START button

The selected programme is then memorised (even in the event of power failure).

#### "Change programme"

- Press the START button for 2 sec. until the Start indicator lamp switches off;
- Select another programme and press the START button again.

Wash cycle

- Only open the dishwasher if necessary (Warning: beware of hot steam).
- If the appliance is switched off during a wash cycle, when switched on again it will resume the cycle from where it was interrupted.

### Switch off the appliance

Only after the START button has switched off: Press the **ON / OFF** button. All the indicator lamps switch off.

### Shut off the water tap, unload the racks

**Warning: when the door is opened steam comes out!**  
Unload the appliance, starting from the lower rack.

# Dishwasher loading instructions and racks provided

## Upper rack:

depending on the model

### Multi-purpose support (A) <sup>1)</sup>:

Depending on the position, for long-handled utensils, cups and glasses. May be used in three different positions.


### Crockery holders (B):

Depending on the position, for example plates, cups and long-stemmed glasses.

### Revolving glass support (C) <sup>2)</sup>:

Depending on the position, for example small or long-stemmed glasses.


**Long-handled utensils (e.g. carving forks, knives) must be arranged with the sharp end facing in towards the appliance.**

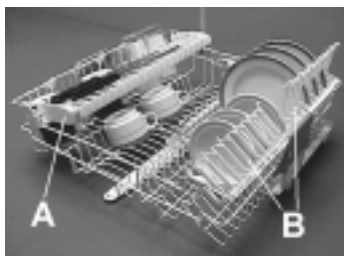

## Half Load:

Load the upper rack **only**.


Place the cutlery basket (D) in the upper rack.

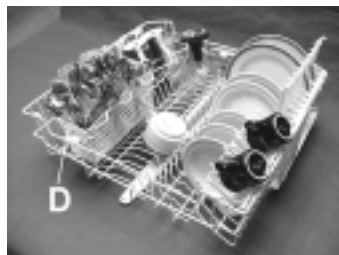

## Rack height adjustment (also when loaded):

- **Lower adjustment:** pull out the **two** rack handles outwards (E) and lower the rack.
- **Upper adjustment:** pull the **two** handles (E) upwards until the rack clicks into place (Factory setting).

**The rack must be level on both sides.**

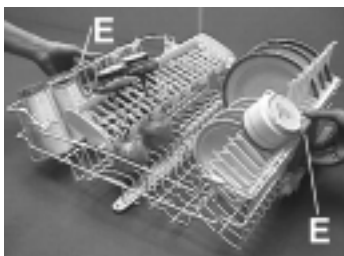


## Lower rack:

Depending on the model with fixed or tilting plate holders (F).

## Half Load:

Load the lower rack **only**.

Greater washing power, particularly for plates and saucepans.


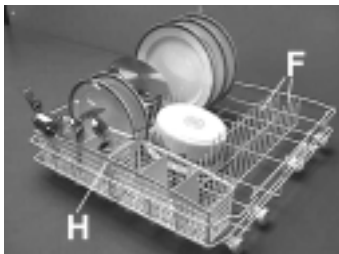


## Cutlery basket (G) or (H):

Some models are provided with a grid (I) that can be fitted onto the cutlery basket to keep items separated.

Cutlery basket (D) for appliances with half load only.

**Sharp knives and forks that might cause injury must be placed in the cutlery basket with the sharp end facing downwards.**

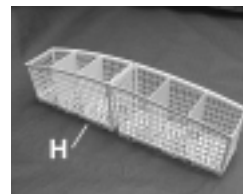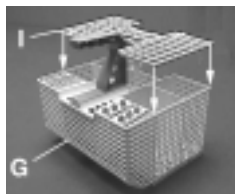

**Only use dishwasher-proof crockery and dishes. Do not use the appliance for items not suitable for washing in a dishwasher, for example wooden items, aluminium, plastic utensils, tin, hand-decorated crockery (unglazed), silver cutlery.**

Spare parts which are sold separately:

<sup>1)</sup> Multi-purpose support (A) - N. AMH 369.

<sup>2)</sup> Revolving glass support (C) - N. WGH 1000.

## What to do if...

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem (\* see also the corresponding chapter in the user instructions).

Problem	Cause	Remedy
<b>The appliance is not working</b>	<ul style="list-style-type: none"> <li>No water supply.</li> <li>The appliance does not load sufficient water.</li> <li>There is a power failure.</li> <li>Starting the selected programme.</li> </ul>	<ul style="list-style-type: none"> <li>Open the tap.</li> <li>Clean the water supply tap filter. Ensure there are no kinks in the water hose.</li> <li>Insert the plug into the mains socket.</li> <li>Press the Start button.</li> <li>Close the door.</li> <li>Check the domestic circuit fuse.</li> <li>The programme can be set to "0" to start.</li> </ul>
<b>If crockery is not perfectly dry</b>	<ul style="list-style-type: none"> <li>Insufficient rinse aid.</li> <li>Residual water in cavities.</li> </ul>	<ul style="list-style-type: none"> <li>Increase dosage *.</li> <li>Load crockery at an angle.</li> </ul>
<b>If crockery is not perfectly clean</b>	<ul style="list-style-type: none"> <li>The water jet does not reach the crockery.</li> <li>Insufficient detergent.</li> <li>Unsuitable programme.</li> <li>Spray arms blocked.</li> <li>Spray arm nozzles clogged.</li> <li>Incorrect detergent/detergent too old.</li> </ul>	<ul style="list-style-type: none"> <li>Arrange crockery so that items do not touch each other. Load crockery upside down.</li> <li>Follow recommended detergent dosage.</li> <li>Select a more intense wash cycle.</li> <li>The spray arms must be able to turn freely.</li> <li>Remove any impurities obstructing the water flow *.</li> <li>Use a good quality detergent.</li> </ul>
<b>Sandy or grainy residues</b>	<ul style="list-style-type: none"> <li>Clogged filters.</li> <li>Filters incorrectly assembled.</li> </ul>	<ul style="list-style-type: none"> <li>Check filters regularly/if necessary clean *.</li> <li>Insert the filter correctly *.</li> </ul>
<b>Colour of plastic parts faded</b>	<ul style="list-style-type: none"> <li>Tomato/carrot juice...</li> </ul>	<ul style="list-style-type: none"> <li>Depending on the material, if necessary use a detergent with a greater whitening power.</li> </ul>
<b>Deposits on crockery</b>	<ul style="list-style-type: none"> <li>removable</li> <li>not removable</li> </ul>	<ul style="list-style-type: none"> <li>Streaks on the crockery/glasses.</li> <li>Streaks on glasses.</li> <li>Layer of salt on crockery/glasses.</li> <li>Insufficient water softening, calcium deposits.</li> <li>Increase the rinse aid dosage *.</li> <li>Reduce the rinse aid dosage *.</li> <li>Close the salt container lid properly*.</li> <li>Change water hardness setting, if necessary add salt *.</li> </ul>
<b>Opaque glasses/ glasses not sparkling</b>	<ul style="list-style-type: none"> <li>Cannot be washed in the dishwasher.</li> </ul>	<ul style="list-style-type: none"> <li>Use suitable glasses.</li> </ul>
<b>Rust on cutlery</b>	<ul style="list-style-type: none"> <li>Not made of stainless steel.</li> </ul>	<ul style="list-style-type: none"> <li>Use suitable cutlery.</li> </ul>
<b>Identifying appliance faults</b>	<ul style="list-style-type: none"> <li>The START indicator lamp flashes.</li> <li>Indicator F... (if provided).</li> </ul>	<ul style="list-style-type: none"> <li>Ensure the filter assembly is not clogged and that there is no interruption to the water supply (if necessary, clean the filters *). Start the programme again. Press the START button for 2 seconds, until the START indicator lamp switches off. Select a new programme and press the Start button again.</li> </ul>

If after carrying out the above checks the malfunction persists or appears again, turn the appliance off and turn off the water supply tap, then call our After-Sales Service (see guarantee).

Before contacting our After-Sales Service, take note of the following:

- The nature of the fault.
- The appliance type and model.
- The service code (the number indicated on the adhesive rating plate) inside the door on the right-hand side.

