

Front and rear door trim panels

A. Removing/fitting the front and rear door trim panels

Hint: With effect from model year 1994, the method of removing and fitting the door trim panels on 440/460 models has been modified.

Remove the front door trim panel



Remove the upper cover from the door handle by inserting a screwdriver in the lower end and unhooking the cover at the top.

Remove the two screws (1) and take the handle off the door.

Remove the escutcheon plate from the door lock remote control handle (unhook it at the rear and pull it out at the front end).

Remove the window winder (if fitted).

Remove the Side Protection badge and the loudspeaker panel.

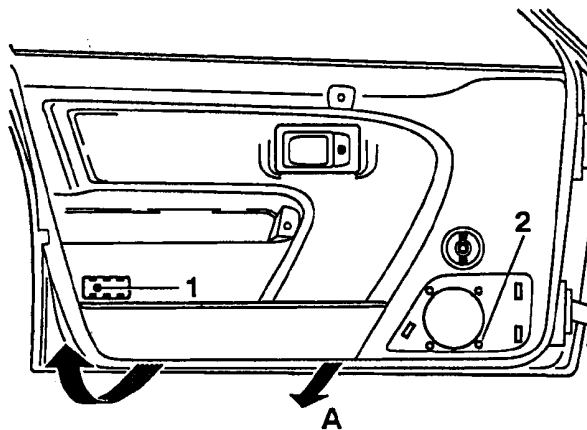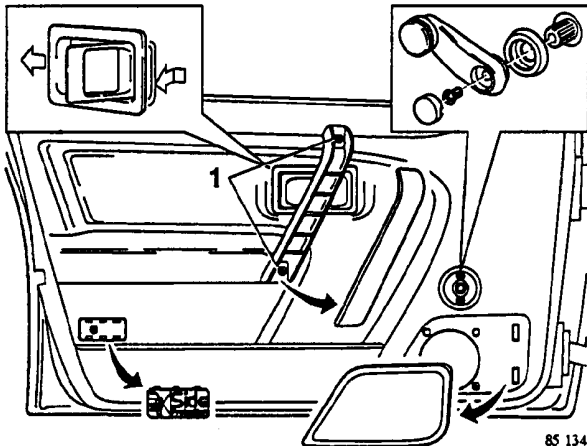

Remove the screws:

- 1 Together with the Side Protection badge mounting plate.
- 2 At the bottom near the loudspeaker, or remove the complete loudspeaker assembly.

Pull the door trim panel loose at the bottom (2x clip (A)). Lift up the rear end of the panel and remove it from the door with an upwards twisting motion. Unplug the connector(s) (if fitted).

Renew or transfer component parts of the front door trim panel


Door bin:

- two screws (1) from the Side protection pad cover;
- unhook the three clips (2) at the bottom.

Switch or window winder (two screws (3), if fitted).

The locking button collet (4).

The clips (5) at the bottom.

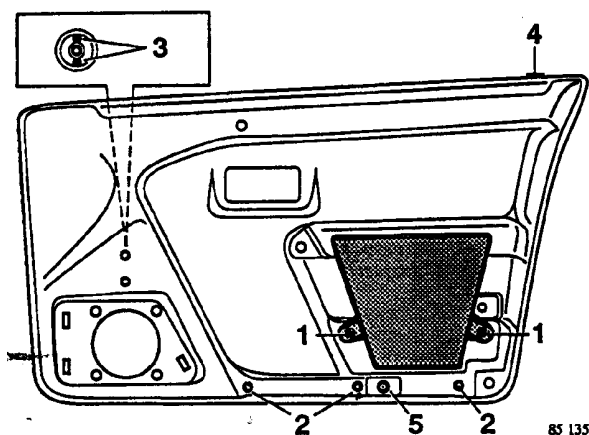

Fit the front door trim panel


Plug in the connectors (if fitted).

Hook the front upper part of the panel into place and fit the panel by pivoting it to the rear and lower end.

Push in the two clips (A) at the bottom.

Fit the screws:

- 1 Together with the Side Protection badge mounting

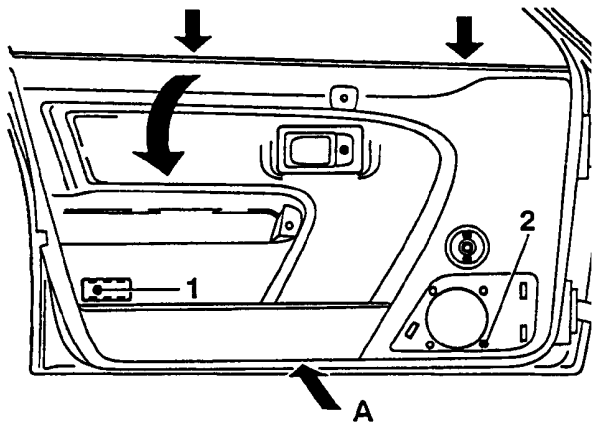


85 134

plate.

- 2 At the bottom near the loudspeaker, or fit the complete loudspeaker assembly.

Restore the other removed parts to their original positions; see Operation A1. **Remove the front door trim panel**

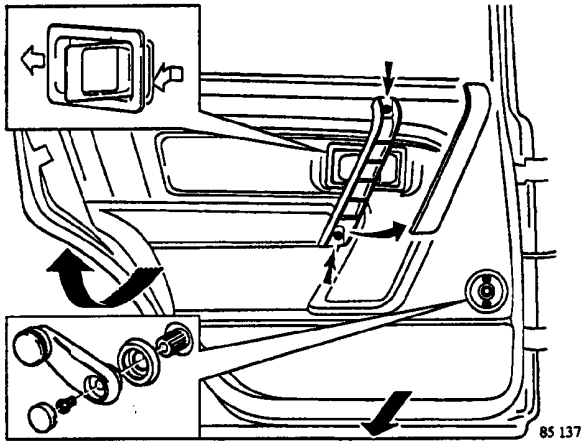

85 137

Remove the rear door trim panel

Remove the window winder (if fitted).

Remove the upper cover from the door handle by inserting a screwdriver in the lower end and unhooking the cover at the top.

Remove the two screws and take the handle off the door.

Pull the door trim panel loose at the bottom (two clips).

Hold the rear end of the panel and remove it from the door with an upwards twisting motion.

Unplug the connector(s) (if fitted).

Renew or transfer component parts of the rear door trim panel


Switch or window winder (two screws (1), if fitted).

The two clips (2).

The locking button collet (3).

Side Protection pad cover (4) (glued).

Note! fasten the Side Protection pad cover with glue.

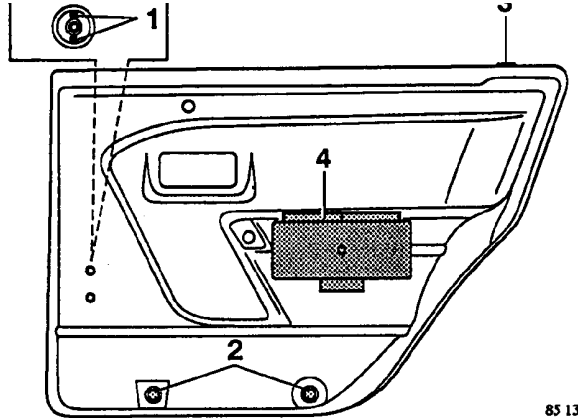

85 138

Fit the rear door trim panel

Fitting is in reverse order to removal.